


PARAMOTORE SPECIFICO - SPECIFIC ENGINE GUARD - PARE-CARTER SPECIFIQUE
SPEZIFISCHES STURZBUEGEL - PROTEGEMOTOR ESPECIFICO

HONDA XRV 750 AfricaTwin

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

LATO SINISTRO
LEFT SIDE
COTE GAUCHE

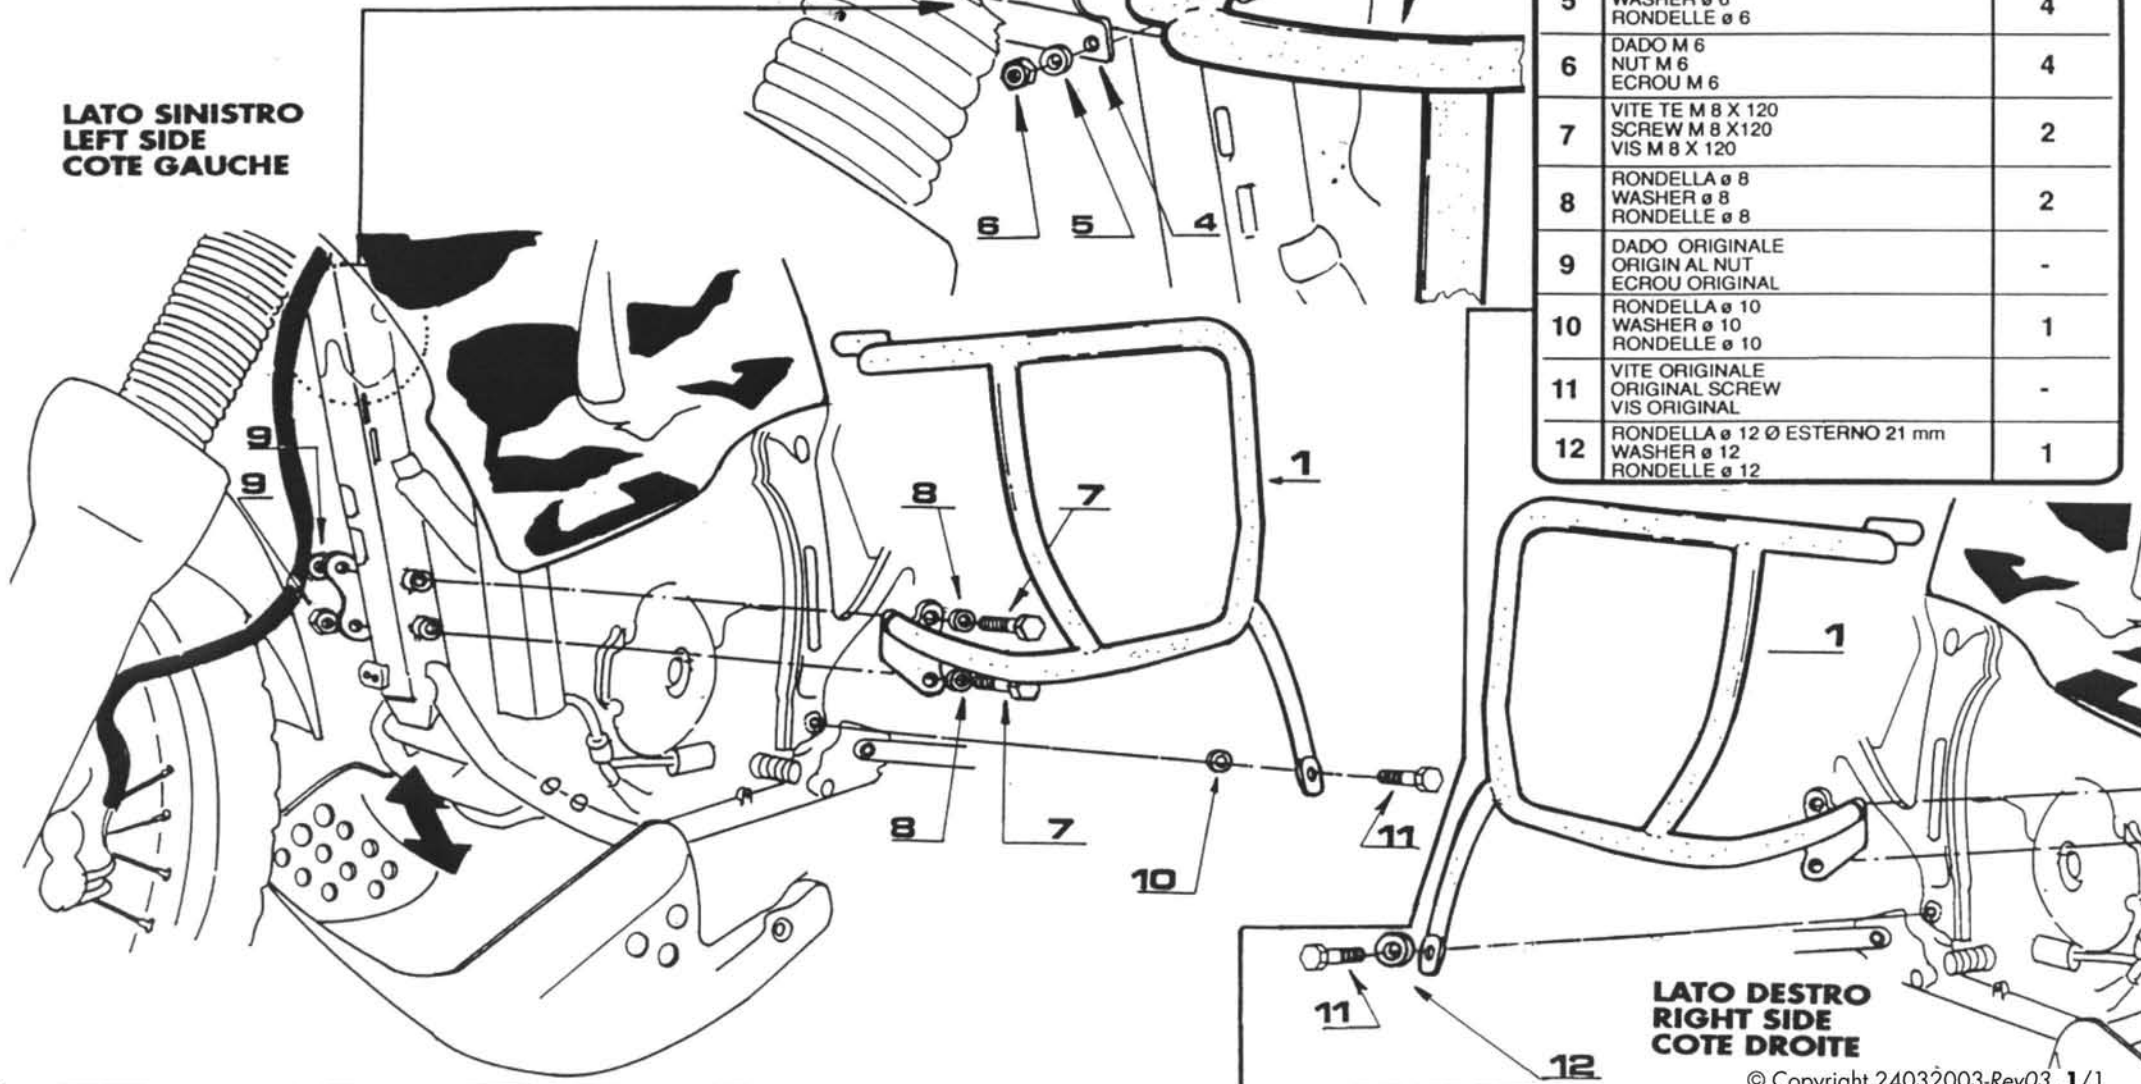

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE)
1	PARAMOTORE ENGINE GARD PARACARTER	2
2	CAVALLOTTO SPECIALE SPECIAL CRAMP CRAMPON SPECIAL	2
3	SUPPORTO SUPPORT SUPPORT	1
4	SUPPORTO SUPPORT SUPPORT	1
5	RONDELLA ϕ 6 WASHER ϕ 6 RONDELLE ϕ 6	4
6	DADO M 6 NUT M 6 ECROU M 6	4
7	VITE TE M 8 X 120 SCREW M 8 X 120 VIS M 8 X 120	2
8	RONDELLA ϕ 8 WASHER ϕ 8 RONDELLE ϕ 8	2
9	DADO ORIGINALE ORIGINAL NUT ECROU ORIGINAL	-
10	RONDELLA ϕ 10 WASHER ϕ 10 RONDELLE ϕ 10	1
11	VITE ORIGINALE ORIGINAL SCREW VIS ORIGINAL	-
12	RONDELLA ϕ 12 ϕ ESTERNO 21 mm WASHER ϕ 12 RONDELLE ϕ 12	1

LATO DESTRO
RIGHT SIDE
COTE DROITE