



SHAD

YAMAHA MT09 TRACER '18

Y0TR98IF

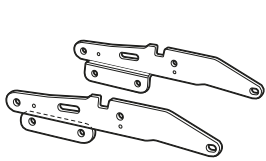

1 262314 x1 →
262315 x1 ←

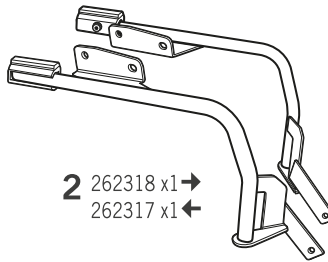

2 262318 x1 →
262317 x1 ←



3 303045 x 10
Ø8



4 304053 x4
M8 x 30 Din 7380



5 302024 x 4
M8



6 304211 x2
M8 x 15 Din 933



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system or side bag later the top master.

